

9SUBMERSIBLE PUMP

HOSE RACK

AIR HANDLER

 HIGH EFFICIENCY FILTER REDUCER

RECEIVER TANK

BY AE = WORLEYPARSONS (DEFAULT)
BY V = VENDOR

E POINT

Diagram illustrating the structure of a drawing area continuation symbol:

- SERVICE DESCRIPTION**: Points to the top left of the symbol.
- DRAWING AREA COORDINATES**: Points to the top right of the symbol.
- TO/FROM CONTINUATION**: Points to the right side of the symbol.
- DRAWING NUMBER**: Points to the bottom right of the symbol.
- DESCRIPTION**: Points to the bottom left of the symbol.

The symbol itself is a horizontal arrow pointing right, containing the text **XXXXXXXXXX (XX)**. The text **XXXXXXXXXX** is also shown on the left and right sides of the symbol.

"THIS DRAWING IS THE PROPERTY OF THE **AMERICAN ELECTRIC POWER SERVICE CORP.** AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED, IN WHOLE OR IN PART, OR USED FOR FURNISHING INFORMATION TO ANY PERSON WITHOUT THE WRITTEN CONSENT OF THE **AEP SERVICE CORP.**, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND IS TO BE RETURNED UPON REQUEST"

**AEP AMERICAN
ELECTRIC
POWER**

AEP SERVICE CORP.
1 RIVERSIDE PLAZA
COLUMBUS, OH 43215